

# INSTRUCTION MANUAL | ALARM CLOCK SILVER MIRROR KA5876-77

## MAIN FEATURES

- Time Display Mode: 12- or 24-hour display
- Calendar Mode: Displays month and date
- Alarm Mode: Alarm setting with snooze
- Temperature Mode: -10°C to 50°C (14°F to 122°F)
- 3 Display Modes: Time | Calendar | Temperature
- Adjust Brightness: 3 dimmer levels
- Automatic Brightness: Automatically dims from 18:00 to 6:00 (adjustable)
- Power Supply: 3 AAA batteries or USB cable

## DISPLAY MODE SELECTION

- Press and hold the MODE button until the display cycles through time, date, and indoor temperature. The default display is TIME.

## TIME SETTING (12HR/24HR | HOUR - MINUTE):

- At the TIME display, press and hold the MODE button. When the 24Hr indicator flashes, use the UP or DOWN button to select the 12Hr display.
- Press the MODE button again. When the hour digit flashes, use the UP or DOWN button to select the correct hour.
- Press the MODE button again. When the minute digit flashes, use the UP or DOWN button to select the correct minute.
- Press the MODE button to exit time settings.

## DATE SETTING:

- At the TIME display, press the MODE button once to switch to the MONTH/DATE display. Then press and hold the MODE button. When the year flashes, use the UP or DOWN button to select the correct year.
- Press the MODE button again. When the month flashes, use the UP or DOWN button to select the correct month.
- Press the MODE button again. When the day flashes, use the UP or DOWN button to select the correct day.
- Press the MODE button to exit date settings.

## ALARM SETTING:

- Press and hold the ALARM button. When the hour digit flashes, use the UP or DOWN button to select the alarm hour.
- Press the ALARM button again. When the minute digit

flashes, use the UP or DOWN button to select the alarm minute.

- Press the ALARM button again. When the snooze minute flashes, use the UP or DOWN button to set the snooze time (default is 5 minutes).
- Press the ALARM button again. When the alarm period flashes, use the UP or DOWN button to select the alarm period:
  - 1-5 (Mon.-Fri.)
  - 1-6 (Mon.-Sat.)
  - 1-7 (Mon.-Sun.)
- Press the ALARM button to exit the alarm settings.

## USING THE ALARM:

- Press the ALARM button to activate the alarm; the alarm clock icon appears on the screen.
- Press the ALARM button again to deactivate the alarm; the alarm clock icon disappears.
- When the alarm sounds, press the LIGHT/SNOOZE button to activate snooze—the alarm icon will flash continuously.
- The alarm will automatically repeat the next day if enabled.

## LED DIMMER SETTING:

- The dimmer automatically darkens from 18:00 to 6:00.
- To adjust the dimmer time:
  - At the TIME display, press the MODE button three times until the display shows "OFF" or "ON."
  - Use the UP or DOWN button to select "ON."
  - Press and hold the MODE button to activate the dark dimmer start time. When the hour flashes, use the UP or DOWN button to select the hour.
  - Press the MODE button again. When the minute flashes, use the UP or DOWN button to select the minute.
  - Press the MODE button again to set the dimmer end time. When the hour flashes, use the UP or DOWN button to select the hour.
  - Press the MODE button again. When the minute flashes, use the UP or DOWN button to select the minute.
  - Press the MODE button to exit the settings.
- Press the UP button to adjust the brightness of the dimmer.

Celsius/Fahrenheit Setting:

- At the TIME display, press the MODE button twice to access the indoor temperature display.
- Press the DOWN button to select either Celsius or Fahrenheit.



EN Manual  
NL Handleiding  
DE Bedienungsanleitung  
FR Manuel d'instructions  
IT Manuale utente  
ES Manual de instrucciones  
DK Brugervejledning  
PL Podręcznik  
PT Manual de instruções  
SE Bruksanvisning

## Warranty

- EN** There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.
- NL** Er is een garantie van twee jaar op fabricagefouten op alle Karlsson-klokken, geldig vanaf de aankoopdatum.
- DE** Auf alle Karlsson-Uhren gibt es eine zweijährige Garantie auf Herstellungsfehler, die ab dem Kaufdatum gültig ist.
- FR** Il y a une garantie de deux ans contre les défauts de fabrication sur toutes les horloges Karlsson, valable à partir de la date d'achat.
- IT** Tutti gli orologi Karlsson sono coperti da una garanzia di due anni contro i difetti di fabbricazione, valida dalla data di acquisto.
- ES** Existe una garantía de dos años contra defectos de fabricación en todos los relojes Karlsson, válida a partir de la fecha de compra.
- DK** Der er to års garanti mod fabrikationsfejl på alle Karlsson-ure, der gælder fra købsdatoen.
- PL** Na wszystkie zegary Karlsson udzielana jest dwuletnia gwarancja na wady fabryczne, ważna od daty zakupu.
- PT** Há uma garantia de dois anos contra defeitos de fabricação em todos os relógios Karlsson, válida a partir da data de compra.
- SE** Det finns två års garanti mot fabrikationsfel på alla Karlssons klockor, gäller från inköpsdatum.

## Maintenance

- EN** A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.
- NL** Een zachte doek kan worden gebruikt om uw klok schoon te maken. Gebruik geen bijtende reiniger of chemische oplossing op de klok.
- DE** Ein weiches Tuch kann verwendet werden, um Ihre Uhr zu reinigen. Verwenden Sie kein ätzendes Reinigungsmittel oder eine chemische Lösung für die Uhr.
- FR** Un chiffon doux peut être utilisé pour nettoyer votre horloge. N'utilisez pas de nettoyant corrosif ou de solution chimique sur l'horloge.
- IT** È possibile utilizzare un panno morbido per pulire l'orologio. Non utilizzare detergenti corrosivi o soluzioni chimiche sull'orologio.
- ES** Se puede usar un paño suave para limpiar el reloj. No use limpiadores corrosivos o solución química en el reloj.
- DK** En blød klud kan bruges til at rengøre dit ur. Brug ikke ætsende rengøringsmiddel eller kemisk oplosning på uret.
- PL** Do czyszczenia zegara można użyć miękkiej szmatki. Nie używaj środków czyszczących ani roztworów chemicznych na zegarze.
- PT** Um pano macio pode ser usado para limpar seu relógio. Não use produtos de limpeza corrosivos ou solução química no relógio.
- SE** En mjuk trasa kan användas för att rengöra din klocka. Använd inte frätande rengöringsmedel eller kemisk lösning på klockan.

## WEEE Symbol

 **EN** The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

 **NL** Het symbool met de doorgestreepte vuilnisbak op wieltjes geeft aan dat het product gescheiden van het huishoudelijk afval moet worden aangeboden. Het product moet worden ingeleverd voor recycling in overeenstemming met de plaatselijke milieuvorschriften voor afvalverwerking.

 **DE** Das Symbol mit der durchgestrichenen Abfalltonne bedeutet, dass das Produkt getrennt vom Haushaltsabfall entsorgt werden muss. Das Produkt muss gem. der örtlichen Entsorgungsvorschriften der Wiederverwertung zugeführt werden.

 **FR** Le pictogramme de la poubelle barrée indique que le produit doit faire l'objet d'un tri. Il doit être recyclé conformément à la réglementation environnementale locale en matière de déchets.

 **IT** Il simbolo del cassetto barrato indica che il prodotto non può essere eliminato con i comuni rifiuti domestici. Il prodotto dev'essere riciclato nel rispetto delle norme ambientali locali per lo smaltimento dei rifiuti.

 **ES** La imagen del cubo de basura tachado indica que el producto no debe formar parte de los residuos habituales del hogar. Se debe reciclar según la normativa local medioambiental de eliminación de residuos.

 **PL** Przekreślony symbol kosza na odpady oznacza, że oznaczony produkt nie może być wyrzucony wraz ze zmieszany odpadami komunalnymi z gospodarstwa domowego. Zużyty sprzęt elektryczny i elektroniczny należy przekazać do przerzutania i recyklingu zgodnie z obowiązującymi w danym kraju przepisami ochrony środowiska dotyczącymi gospodarowania odpadami.

 **PT** O símbolo do caixote do lixo com o sinal de proibição indica que esse artigo deve ser separado dos resíduos domésticos convencionais. Deve ser entregue para reciclagem de acordo com as regulamentações ambientais locais para tratamento de resíduos.

 **DK** Táknið með mynd af ruslatunnu með krossi yfir þýðir að ekki má farga vörurnu með venjulegu heimilissorpi. Vörurni þarf að skila í endurvinnslu eins og lög gera ráð fyrir á hverjum stað fyrir sig.

 **SE** Symbolen med den överkorsade soputunnan betyder att produkten ska kasseras separat från hushållsavfall. Produkten ska lämnas in för återvinning enligt lokala regler för avfallshantering.



**RoHS**

