


INSTRUCTION MANUAL

EN

ALARM CLOCK CHANGING COLOUR LED BAMBOO

KA5931

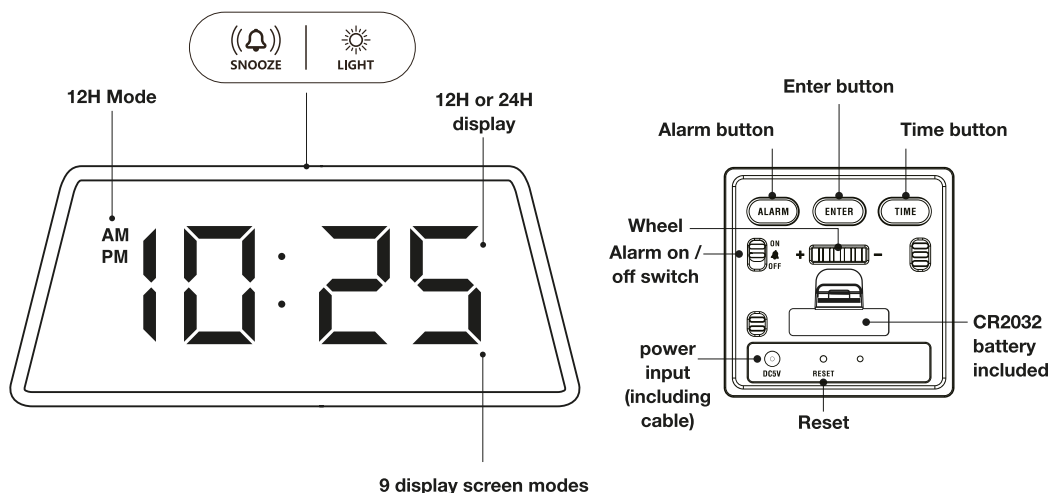

Setting brightness

Turn the **wheel** to adjust the brightness (brightness range L01 - L99)

Time Setting

Press the **"TIME"** button to switch between 12/24-hour time display.

Press the **"TIME"** button for 3 seconds to enter the time setting menu, then slide the knob to select the hour and minute.

After selecting the correct hour, press the **"TIME"** button to confirm and proceed.

Turn the **wheel** to select the correct minute value, then press the **"ENTER"** button to confirm and proceed."

Alarm Clock Setting

Press and hold the **"ALARM"** button for 3 seconds to enter the alarm setting menu, then turn the **wheel** to select the hour and minute.

After selecting the correct hour, press the **"ALARM"** button to confirm.

Turn the **wheel** to select the correct minute value, then press the **"ENTER"** button to confirm and proceed.

Alarm on / off switch

When the alarm switch is activated, it will sound at the same time every day. When the alarm is turned on, the display shows **"ON AL"** and when it is turned off, it shows **"-- AL."**

Colour Setting

Touch the **[SNOOZE /LIGHT]** key to switch the display color.

RGB Display Screen Colour modes: white, orange, yellow, cyan, purple, overall seven-color automatic transformation, RGB rainbow seven-color transformation, RGB right-to-left transformation, RGB bottom-to-up transformation.

Snooze

When the alarm clock rings, touch the **[SNOOZE /LIGHT]** button; the alarm will stop ringing and snooze will be activated. The alarm will ring again after 7 minutes. If left untouched, the alarm will stop after 2 minutes and activate the snooze function again, this sequence ends after 3 times.

Turn off snooze: Press any key on the back during the alarm / snooze to deactivate the alarm and snooze function.

Battery

This alarm clock only operates on DC5V USB cable (DC5V USB adapter not included). The CR2025 battery is for memory and backup only.

Reset

Use a needle or a small stick to push the "reset" hole to reset all settings.

KARLSSON
QUALITY TIME

Karlsson is a trademark of Present Time
Televisieweg 16, 1322 AL, Almere
www.karlsson-clocks.com

