

INSTRUCTION MANUAL ALARM CLOCK FM RADIO KA6036



1. Telescopic aerial
2. Display
3. Temperature sensor
4. Operating buttons (see next page)
5. Connection socket DC 5V
6. Speaker
7. Battery compartment, 3x LR6 (AA).
5V OUTPUT (only functional when mains adapter is connected)
3.5mm AUX IN

Buttons

- RADIO** Turn the radio on and off
- VOL+:** Increase the volume
- VOL-** Decrease the volume
- DOWN**
- Decrease displayed values
 - Set frequency
- UP**
- Increase displayed values
 - Set frequency
- MODE**
- Toggle alarm function on/off
 - Change temperature unit
 - Access setting mode for device and alarm settings
 - Save changed settings

Before use

Inserting/changing batteries:

To operate, you require 3 batteries of type LR6 (AA), 1.5 V. The battery compartment is located at the back of the device.

Push the locking tab of the battery compartment cover towards the compartment and remove it.

Insert the batteries as illustrated at the bottom of the battery compartment. Ensure correct polarity (+/-).

Replace the battery compartment cover.

Tips for using the mains adapter:

To operate the radio, you can also use a mains adapter instead of batteries.

Connection:

Plug the mains adapter into the DC 5V connection socket at the rear of the radio.

Plug the mains adapter into a socket with a voltage matching the specifications under "Technical Data".

Making basic settings:

Once the device is supplied with power (battery or mains), a beep will sound, and the display will show default values and the measured indoor temperature.

1. Press and hold the MODE button until "12 Hr" or "24 Hr" flashes on the display.
2. Use the DOWN or UP button to select the desired time format. In the 12-hour format, the display indicates afternoon hours as "PM".
3. Press MODE to save the selected setting.
4. Use DOWN or UP to adjust values.

Set the following sequentially:

- Year
- Month
- Day
- Hour
- Minute

Radio:

Listening to the radio:

1. Fully extend the telescopic aerial. It is located in a lock on the rear of the radio.
2. Press the RADIO button.
3. Press DOWN or UP. The device will automatically search for the next frequency with sufficient strength and play it. Check the display.
4. Use the VOL+ and VOL- buttons to adjust the volume.
5. Press RADIO to turn off the radio.

Improving reception:

Always fully extend the telescopic aerial and adjust it for optimal reception.

Verify whether the station is received on a different frequency.

Change the device's location if necessary.

Selecting a station manually:

Fully extend the telescopic aerial. It is located in a lock on the rear of the radio.

Press the RADIO button.

Press and hold the DOWN or UP button until "SCN" appears on the display.

Press DOWN or UP repeatedly in 0.1 MHz increments to set the desired frequency.

The manual setting function remains active for approximately 5 seconds. Once "SCN" disappears from the display, the function is automatically disabled.

Alarm:

You can wake up to a radio station or a default alarm sound.

Waking up to a radio station:

1. Turn on the device and select the desired radio station.
2. Press and hold MODE until the frequency flashes a few times and two speaker symbols appear on the upper part of the display.
3. Press RADIO to turn off the device.

Press MODE twice. The display will show "RDO".

Use the UP button to toggle the alarm function on or off.

On: The upper part of the display shows the selected frequency and two speaker symbols.

Off: The display shows - - -.

Press and hold MODE until the hour digit of the alarm time starts flashing.

Use UP and DOWN to set the desired alarm hour.

Press MODE.

Use UP and DOWN to set the desired alarm minute.

Press MODE.

Waking up to a default alarm sound:

The device must be off (displaying temperature, day, and date).

Press the MODE button. The display will show "ALM".

Press the UP button. The display will show a bell symbol, enabling the alarm function.

Press and hold MODE until the hour digit of the alarm time starts flashing.

Use UP and DOWN to set the desired alarm hour.

Press MODE.

Use UP and DOWN to set the desired alarm minute.

Press MODE twice.

Being awakened:

At the set time, the selected alarm source (radio or default alarm sound) will activate. If the radio is selected, the volume will gradually increase until the maximum alarm volume ("12") is reached.

Auto-stop function:

If no button is pressed, the alarm will turn off automatically after 1 minute.

The radio will turn off automatically after approximately 30 minutes.

Interrupting an alarm function for 24 hours:

Wake up to radio: Press the RADIO button to interrupt the alarm. The alarm will activate at the same time the next day (the bell symbol will remain on the display).

Turning the alarm off completely:

The device must be off (displaying temperature, day, and date).

Press MODE for "ALM" to appear on the display.

Press UP to remove the bell symbol. This disables the default alarm function ("Wake up to an alarm sound").

Press MODE again.

Press UP. The speaker symbols will disappear, and - - - will appear on the display, disabling the radio alarm function.

Press MODE once or twice to return to normal mode.

Tips for the alarm function:

You can combine different alarm sources (e.g., alarm sound at 07:00 and radio at 07:30).

With the radio off, press MODE repeatedly to review set alarm times. You can also set both alarm sources for the same time.

Resetting the radio:

Reset the radio to its default settings if the device is unresponsive, reacts incorrectly to key presses, or the display shows unusual indications.

Remove the batteries from the battery compartment and wait briefly.

Reinsert the batteries, ensuring correct polarity (+/-).

For mains adapter use, disconnect it briefly from the mains and reconnect it.

Changing the temperature unit:

With the radio off, press UP briefly to switch between degrees Celsius (°C) and degrees Fahrenheit (°F).

Warranty

- EN** There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.
- NL** Er is een garantie van twee jaar op fabricagefouten op alle Karlsson-klokken, geldig vanaf de aankoopdatum.
- DE** Auf alle Karlsson-Uhren gibt es eine zweijährige Garantie auf Herstellungsfehler, die ab dem Kaufdatum gültig ist.
- FR** Il y a une garantie de deux ans contre les défauts de fabrication sur toutes les horloges Karlsson, valable à partir de la date d'achat.
- IT** Tutti gli orologi Karlsson sono coperti da una garanzia di due anni contro i difetti di fabbricazione, valida dalla data di acquisto.
- ES** Existe una garantía de dos años contra defectos de fabricación en todos los relojes Karlsson, válida a partir de la fecha de compra.
- DK** Der er to års garanti mod fabriktionsfejl på alle Karlsson-ure, der gælder fra købsdatoen.
- PL** Na wszystkie zegary Karlsson udzielana jest dwuletnia gwarancja na wady fabryczne, ważna od daty zakupu.
- PT** Há uma garantia de dois anos contra defeitos de fabricação em todos os relógios Karlsson, válida a partir da data de compra.
- SE** Det finns två års garanti mot fabriktionsfel på alla Karlssons klockor, gäller från inköpsdatum.

Maintenance

- EN** A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.
- NL** Een zachte doek kan worden gebruikt om uw klok schoon te maken. Gebruik geen bijtende reiniger of chemische oplossing op de klok.
- DE** Ein weiches Tuch kann verwendet werden, um Ihre Uhr zu reinigen. Verwenden Sie kein ätzendes Reinigungsmittel oder eine chemische Lösung für die Uhr.
- FR** Un chiffon doux peut être utilisé pour nettoyer votre horloge. N'utilisez pas de nettoyant corrosif ou de solution chimique sur l'horloge.
- IT** È possibile utilizzare un panno morbido per pulire l'orologio. Non utilizzare detergenti corrosivi o soluzioni chimiche sull'orologio.
- ES** Se puede usar un paño suave para limpiar el reloj. No use limpiadores corrosivos o solución química en el reloj.
- DK** En blød klud kan bruges til at rengøre dit ur. Brug ikke ætsende rengøringsmiddel eller kemisk opløsning på uret.
- PL** Do czyszczenia zegara można użyć miękkiej szmatki. Nie używaj środków czyszczących ani roztworów chemicznych na zegarze.
- PT** Um pano macio pode ser usado para limpar seu relógio. Não use produtos de limpeza corrosivos ou solução química no relógio.
- SE** En mjuk trasa kan användas för att rengöra din klocka. Använd inte frätande rengöringsmedel eller kemisk lösning på klockan.

WEEE Symbol

-  **EN** The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.
-  **ES** La imagen del cubo de basura tachado indica que el producto no debe formar parte de los residuos habituales del hogar. Se debe reciclar según la normativa local medioambiental de eliminación de residuos.
-  **NL** Het symbool met de doorgestreepte vuilnisbak op wietjes geeft aan dat het product gescheiden van het huishoudelijk afval moet worden aangeboden. Het product moet worden ingeleverd voor recycling in overeenstemming met de plaatselijke milieuvoorschriften voor afvalverwerking.
-  **PL** Przekreślony symbol kosza na odpady oznacza, że oznaczony produkt nie może być wyrzucany wraz ze zmieszanymi odpadami komunalnymi z gospodarstwa domowego. Zużyty sprzęt elektryczny i elektroniczny należy przekazać do przetwarzania i recyklingu zgodnie z obowiązującymi w danym kraju przepisami ochrony środowiska dotyczącymi gospodarowania odpadami.
-  **DE** Das Symbol mit der durchgestrichenen Abfalltonne bedeutet, dass das Produkt getrennt vom Haushaltsabfall entsorgt werden muss. Das Produkt muss gem. der örtlichen Entsorgungsvorschriften der Wiederverwertung zugeführt werden.
-  **PT** O símbolo do caixote do lixo com o sinal de proibição indica que esse artigo deve ser separado dos resíduos domésticos convencionais. Deve ser entregue para reciclagem de acordo com as regulamentações ambientais locais para tratamento de resíduos.
-  **FR** Le pictogramme de la poubelle barrée indique que le produit doit faire l'objet d'un tri. Il doit être recyclé conformément à la réglementation environnementale locale en matière de déchets.
-  **DK** Tákníð með mynd af ruslatunnu með krossi yfir þýðir að ekki má farga vörinni með venjulegu heimilisorpi. Vörinni þarf að skila í endurvinnslu eins og lög gera ráð fyrir á hverjum stað fyrir sig.
-  **IT** Il simbolo del cassonetto barrato indica che il prodotto non può essere eliminato con i comuni rifiuti domestici. Il prodotto dev'essere riciclato nel rispetto delle norme ambientali locali per lo smaltimento dei rifiuti.
-  **SE** Symbolen med den överkorsade soptunnan betyder att produkten ska kasseras separat från hushållsavfall. Produkten ska lämnas in för återvinning enligt lokala regler för avfallshantering.

